




Originator: **RCS**

Standards Approval:
Ron Slabaugh

Date: **3/12/2019**

Rev #: **4** Revision Description:
2019 UPDATES

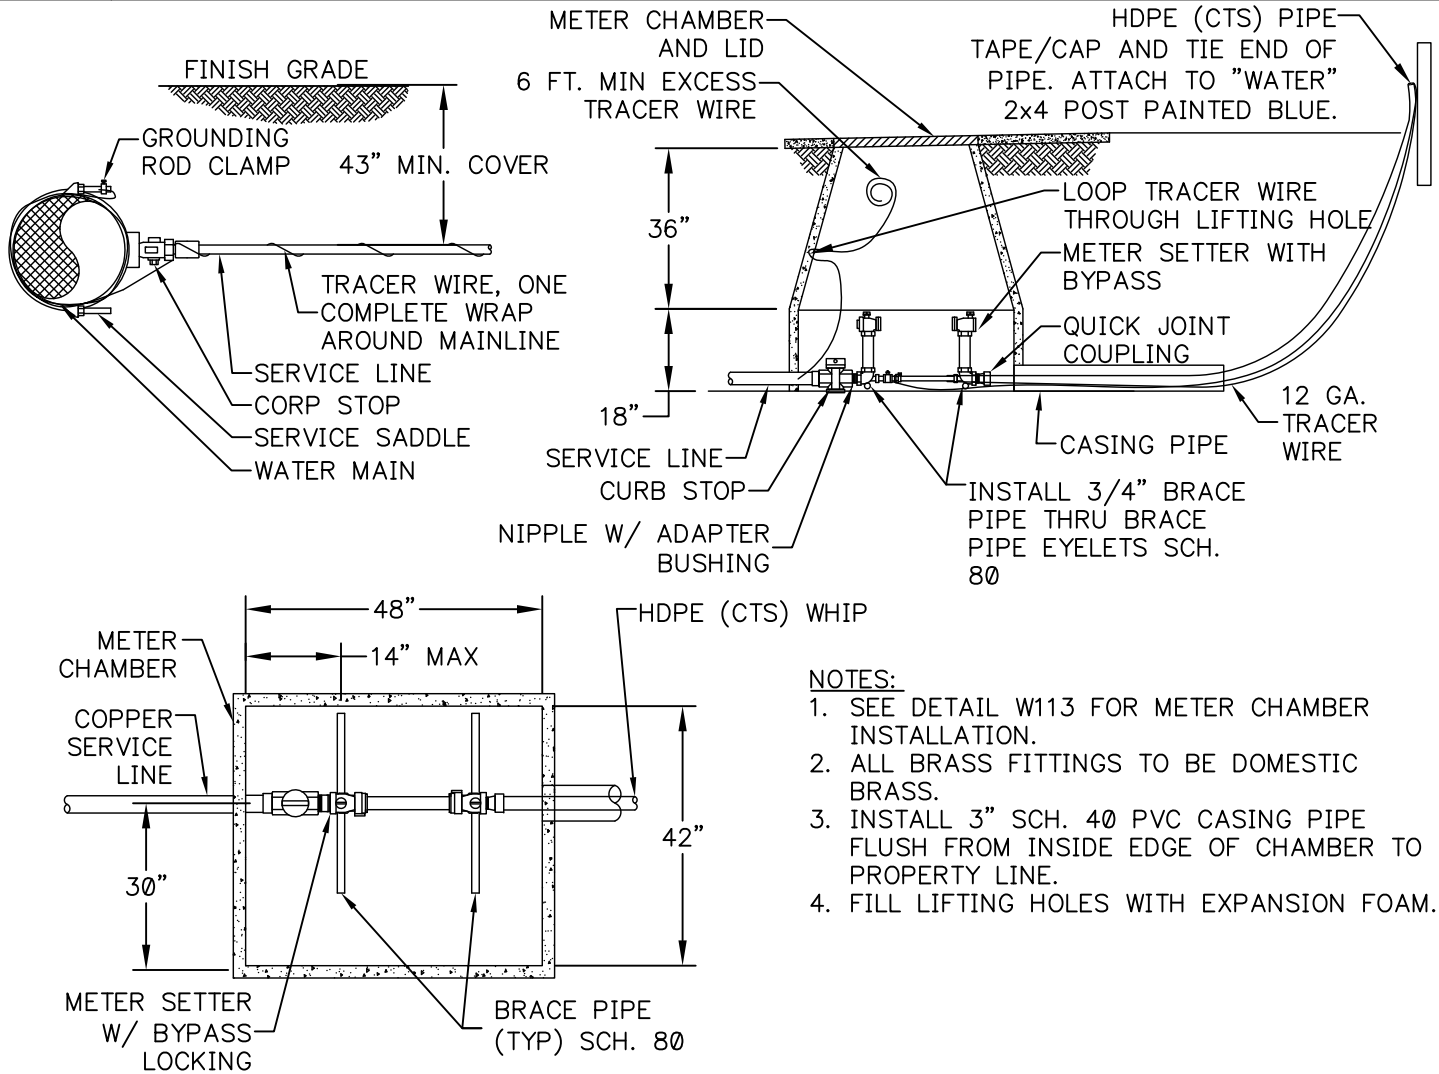

NOTES:

1. SEE DETAIL W113 FOR METER CHAMBER INSTALLATION.
2. ALL BRASS FITTINGS TO BE DOMESTIC BRASS.
3. INSTALL 3" SCH. 40 PVC CASING PIPE FLUSH FROM INSIDE EDGE OF CHAMBER TO PROPERTY LINE.
4. FILL LIFTING HOLES WITH EXPANSION FOAM.

MATERIALS LIST

- (1) WATER METER CHAMBER – 3' HEIGHT TAPERED TOP W/ 18" BOTTOM, TRAFFIC RATED WHEN SHOWN ON DRAWINGS, WILBERT PRECAST, OR EQUAL
- (1) WATER METER CHAMBER LID – CCPUD STANDARD WITH (1) AMR CAP HOLE, D&L FOUNDRY OR EQUAL.
- (1) 2" SERVICE SADDLE – ROMAC 202S
- (1) 2" CORPORATION STOP – BRASS MIP X COMP, FORD FB1100-7-Q, OR EQUAL
- (FT) 2" COPPER CTS SERVICE LINE W/ 12 GAUGE SOLID CORE BLUE COATED COPPER TRACER WIRE
- (1) 5/8" GROUNDING ROD CLAMP – ERITECH HDC58
- (1) 2" CURB STOP – BRASS COMP X FIPT, FORD B41-777-Q, OR EQUAL
- (1) 2" BRASS NIPPLE, 3" LENGTH
- (1) 2" METER SETTER – BRASS W/ (2) 2" ANGLE BALL VALVES WITH BYPASS, FORD VB77-12B-11-77, OR EQUAL
- (3) 2" POLY INSERTS
- (1) 2" QUICK JOINT COUPLING – BRASS COMP X MIPT, FORD C84-77-Q, OR EQUAL
- (1) 3" PVC CASING PIPE SCH 40.
- (1) WATER STAKE FOR CASING PIPES AT PROPERTY LINE
- (1) 2" HPDE (CTS) WHIP